
Plugging the Leaks

QuickTime™ and a TIFF (Uncompressed) decompressor are needed to see this picture.

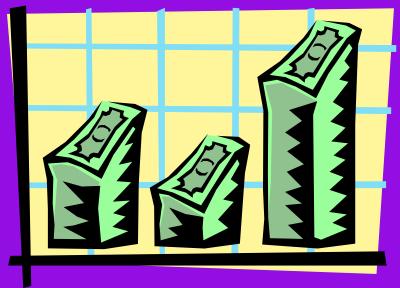

QuickTime[™] and a TIFF (Uncompressed) decompressor are needed to see this picture.



Begin Plugging the Leaks

- Assessments, inspections, audits...
- Professional help
- On-line tools
- Health and safety issues
- Accreditation programs

An Audit by any other Name....

QuickTime[™] and a decompressor are needed to see this picture.

Do-it-Yourself Inspection

This is the cheapest and spots the easiest fixes first

Assessment (May be 3rd party or Do-it-Yourself) Measurement and data-driven

QuickTime™ and a decompressor are needed to see this picture

On-line Tools

From the generic to more data-driven

Audit

Almost always 3rd party; often investment-quality; most expensive (\$.08 - .10 square foot)

QuickTime™ and a decompressor are needed to see this picture.

QuickTime™ and a TIFF (Uncompressed) decompressor are needed to see this picture.

QuickTime™ and a TIFF (Uncompressed) decompressor are needed to see this picture.


Home Energy Use Profile

QuickTime™ and a TIFF (Uncompressed) decompressor are needed to see this picture.

Seek Performance Contracting Services for Efficiency Investments

QuickTime™ and a TIFF (Uncompressed) decompressor are needed to see this picture.



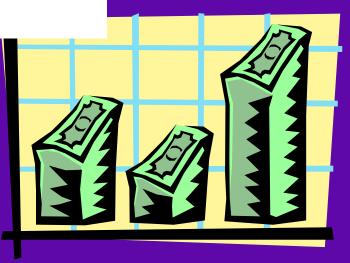

QuickTime™ and a TIFF (Uncompressed) decompressor are needed to see this picture.

Health and Safety Issues

- Mold
- Frayed wiring
- Water leaks
- Overheated electrical panel
- Hazardous materials (asbestos)
- Indoor air quality

Training and Credentials for Becoming an Energy Auditor

QuickTime™ and a decompressor are needed to see this picture.



QuickTime[™] and a decompressor are needed to see this picture.

QuickTime[™] and a decompressor are needed to see this picture.

QuickTime™ and a decompressor are needed to see this picture.