Manufacturer: Rexam Healthcare

Model: Tube-Loc

ASTM Type: IIA

Description:

This is a one piece plastic lug-bayonet closure that is designed for use with a tube (Figure 1).



Figure 1

The closure is opened by pushing down on the closure and simultaneously turning it counterclockwise. The interior of the closure has 4 lugs (Figure 2) which are 90° apart. The 4 lugs fit into the four "L" shaped bayonets on the tube neck (Figure 2) to keep the package closed.

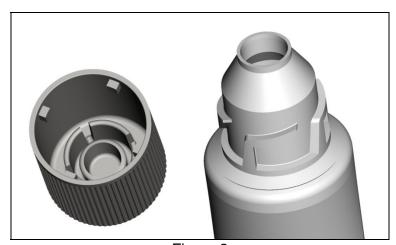


Figure 2

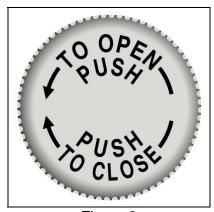


Figure 3

The manufacturer's instructions on the closure are (Figure 3):

(arrow counterclockwise) TO OPEN PUSH

PUSH (arrow clockwise) TO CLOSE